



Replacing final slates using the 'Hallhook'

7

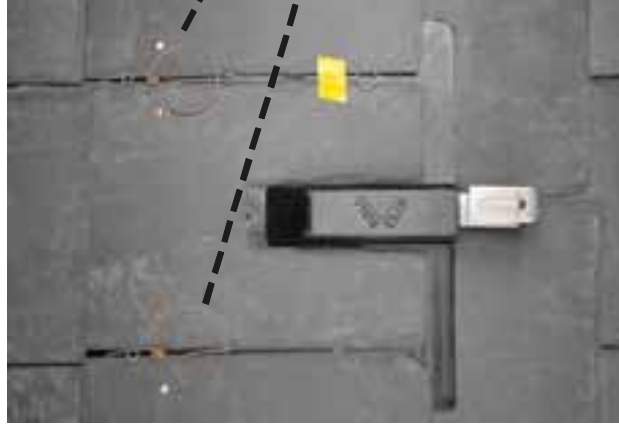

Hallhooks

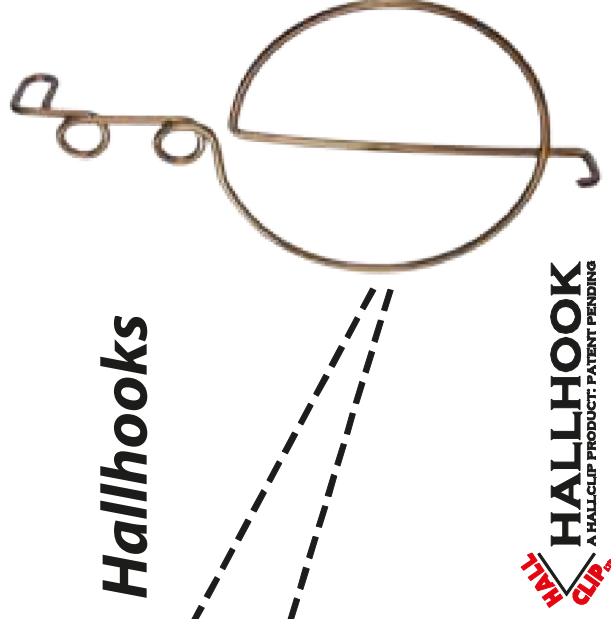

- Step 1: Position the Hallhook between the slates. Use the nail hole that positions the bottom hook at least 10mm up from the finished slate line. Hang the hookpull on the Hallhook as per illustration.
- Step 2: Slide object slate into position then using the hookpull, pull firmly until the Hallhook locates the base of the object slate. Remove hookpull.